





Como configurar a IHM Weinview para comunicar com o CLP Policom SINOVO:

Ao criar o novo programa, abrirá a tela "System Parameter Settings":

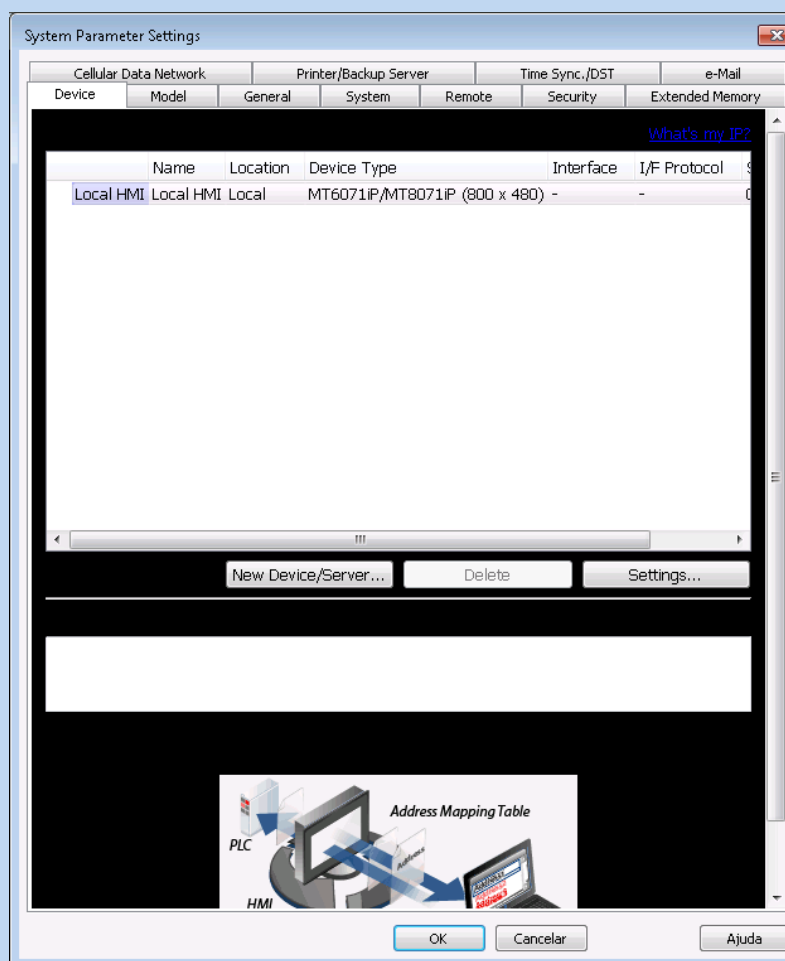


 Clique no botão "New Device/Server":






Aparecerá a seguinte tela:

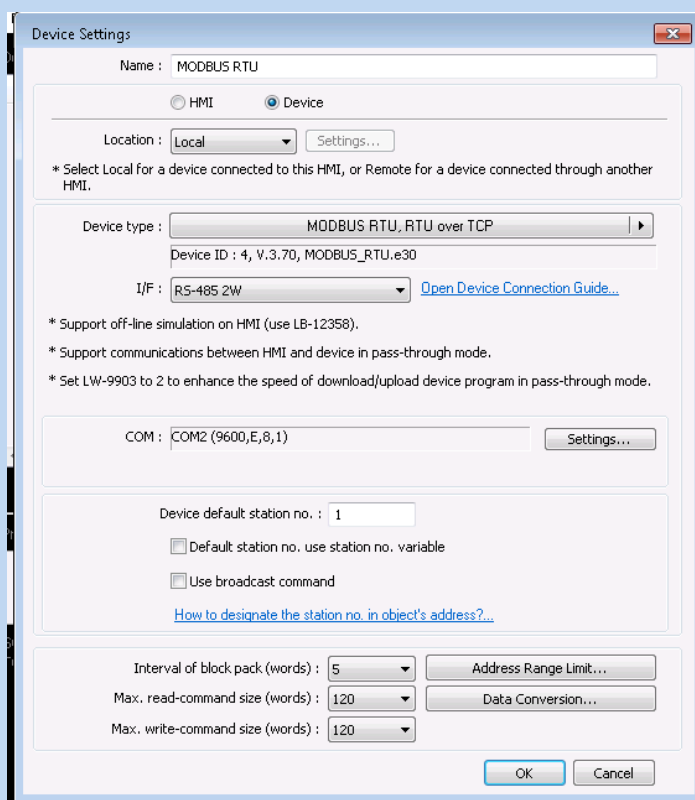


Em Device Type, selecione “Haiwell PLC”:

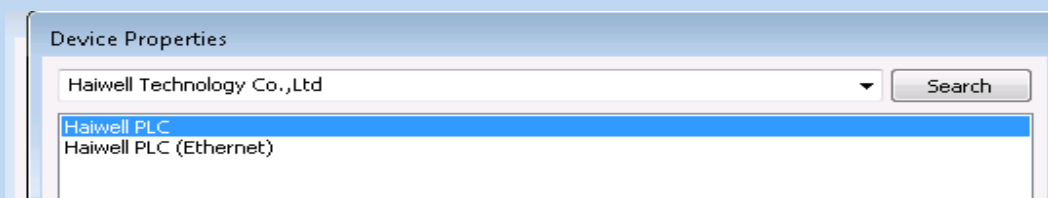




O próximo passo, dependerá do tamanho da sua rede:

Para a rede utilizando o cabo de comunicação incluso a IHM (Até 3m):

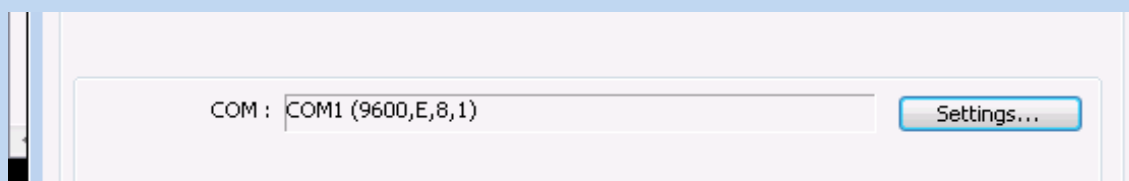

Clique em Settings, e altere para:

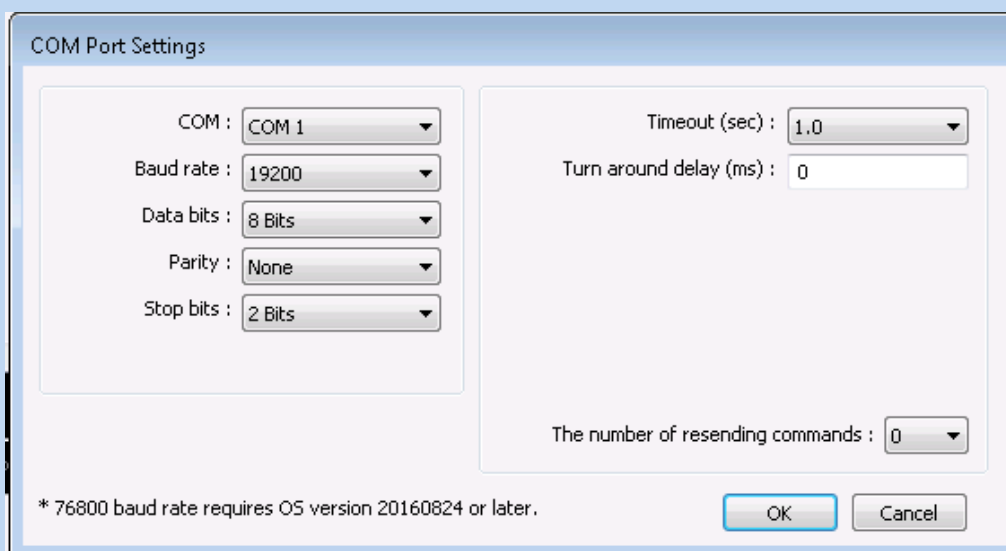

COM 1, 19200, 8,N,2

Pronto! Dê um OK. E sua IHM já estará com os mapas de memória e pronta para comunicar com o CLP POLICOMP SINOVO.

Rua Olivia Guedes Penteado, 692 – Socorro – São Paulo – SP

www.policompcomponentes.com.br

(11) 5661-7579



Para as redes com comprimento superior a 3m (cabo não incluso).

Utilizar um conector DB9 (Fêmea):

PINO (DB9) :	PLC:
1	B-
2	A+

*** Para redes com distância superior a 30m (trinta metros) utilizar um resistor de terminação entre os dois pólos de 100 ohms.

Entrar na tela de configuração e apertar o botão "Settings":

COM :

E altere para seguinte configuração:

COM Port Settings

COM : COM 2 *	Timeout (sec) : 1.0
Baud rate : 19200	Turn around delay (ms) : 0
Data bits : 8 Bits	
Parity : None	
Stop bits : 2 Bits	
* PC only	
	The number of resending commands : 0

* 76800 baud rate requires OS version 20160824 or later.

Rua Olivia Guedes Penteado, 692 – Socorro – São Paulo – SP

www.policompcomponentes.com.br

(11) 5661-7579



Após apertar OK, perceberá que a configuração ficará assim:

Device Settings

Name : Haiwell PLC

☐ HMI ☒ Device

Location : Local Settings...

* Select Local for a device connected to this HMI, or Remote for a device connected through another HMI.

Device type : Haiwell PLC

Device ID : 411, V.1.00, HAIWELL_PLC.e30

I/F : RS-485 2W Open Device Connection Guide...

* Support off-line simulation on HMI (use LB-12358).

COM : COM2 (19200,N,8,2) Settings...

Device default station no. : 1

☐ Default station no. use station no. variable

☐ Use broadcast command

[How to designate the station no. in object's address?...](#)

Interval of block pack (words) : 5

Max. read-command size (words) : 120

Max. write-command size (words) : 120

OK Cancel

Pronto! Sua rede entre IHM e CLP está pronta!

Demais dúvidas, contate nosso suporte técnico:

(11) 5661-7579

(11) 98201-5355

engenharia@policompcomponentes.com.br

Rua Olivia Guedes Penteado, 692 – Socorro – São Paulo – SP

www.policompcomponentes.com.br

(11) 5661-7579